


Nasty Fast Blaster Sport CDI (88-02)

Installation

1. Remove the front hood plastic.
2. Remove the old CDI
3. Plug the CDI and enjoy!

Recommended:

Advancing the stator 3-4 degrees is recommended. There are several write ups on how to advance the stator.

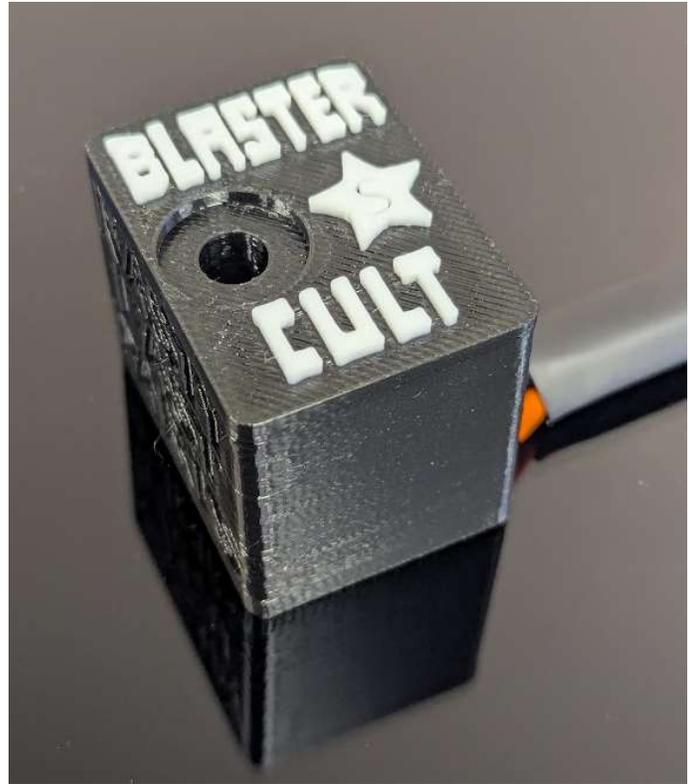

The QR code below will provide some guidance.

*** Notes ***

- Too much timing may cause pinging or overheating. Listen to the motor!
- +6 degrees on the stator may cause kickback.
- A 3D printable timing mark kit can be downloaded here:
<https://www.thingiverse.com/thing:6867772>
- A spark plug temp sensor is recommended. I use a Runleader RL-HM035A-TS002. It does RPM and plug temp. For a blaster: 320° F is ideal, 380° F is hot.
- Water resistant, but not waterproof! Avoid high pressure around the switches!